



Cheek Pad Installation Procedure

Thank you for purchasing our products. All of our products are 100% designed and made in the USA.

Please read instructions completely prior to application.

1. Cut-out the template which was supplied with the cheek pad. If you need to print out another copy, you may [download it here](#). Place the template on the stock in the approximate location shown in Figure 1. Use the horizontal and vertical lines on the template to square it up with the gun, using the parting line on the buttstock as a reference. Adjust location as necessary. Once you are satisfied with the location, use a pencil to lightly mark the outline.
2. Prepare area where the cheek pad will be applied by cleaning with alcohol and lint free towel.
3. Remove protective backing from cheek pad.
4. Center and lightly stick on cheek pad as shown in figure 2. If cheek pad does not look square on the gun, make the necessary adjustments..
5. Starting from the center, smooth down each side one at a time careful to not stretch the pad using light even pressure, see Figure 3.
6. You are able to reposition the cheek pad prior to applying firm pressure.If you are satisfied with the overall look, apply firm pressure all over the pad to complete adhesive bond.
7. OPTIONAL: It is recommended if you have a foam lined hard case, that you store the gun in the case for 24 hours.

If you are experiencing difficulties installing this pad, please contact us at team@convergentdesignsolutions.com and we will assist you in any way we can.

**Thank you for your purchase
Darren & Chris**

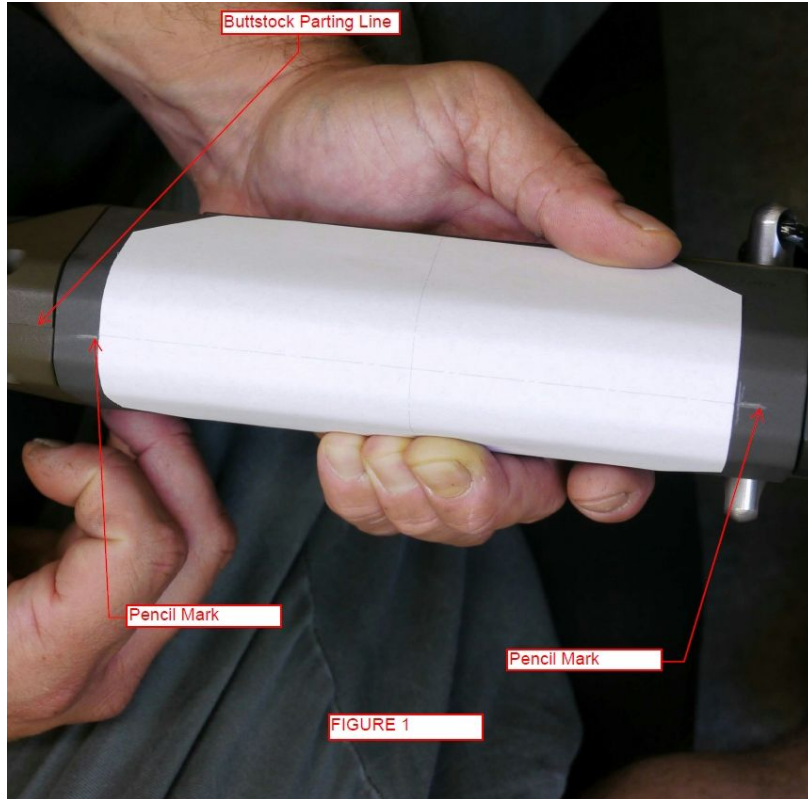




FIGURE 3